


**MANUFACTURER'S NOTES:**

- CHISEL TO CREATE A CHASE AROUND THE PIPE TO THE REQUIRED 25 MM X 25 MM (1 X 1)

1. APPLY KRYSTOL PLUG TO PREPARED CHASE TO STOP FLOWING WATER.
2. TIGHTLY PACK REMAINING CHASE WITH KRYSTOL WATERSTOP GROUT.
3. WATERPROOF ENTIRE WALL OR SLAB WITH KRYSTOL T1.
4. ONE COAT OF KRYSTOL T2 AFTER 3 TO 4 HOURS

**NOTES:**

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.

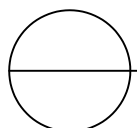

## KRYSTOL LEAK REPAIR SYSTEM

PIPE PENETRATION - LEAK REPAIR