


**MANUFACTURER'S NOTES:**

1. FILL TIE HOLES FLUSH TO THE SURFACE WITH KRYSTOL WATERSTOP GROUT .
2. FORM A 25MM X 25MM (1" X 1") CHASE AROUND THE TIE ROD & CUT DOWN 25MM
3. TIGHTLY PACK, FLUSH TO THE SURFACE WITH KRYSTOL WATERSTOP GROUT

**NOTES:**

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.

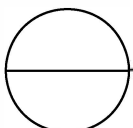

**KRYSTOL WATERSTOP SYSTEM (KWS)**

PIPE PENETRATION - EXT GROUT METHOD